

U.S. ARMY RESEARCH, DEVELOPMENT AND ENGINEERING COMMAND

ECBC-TR-898

ARSENIC TRICHLORIDE FILTRATION PERFORMANCE WITH THE IMPREGNATED CARBON ASZMT

John J. Mahle

RESEARCH AND TECHNOLOGY DIRECTORATE

20110725356

June 2011

Approved for public release; distribution is unlimited.



| | Disclaimer |
|--|---|
| The findings in this report are not to be position unless so designated by other | construed as an official Department of the Army |
| | |
| | |
| | |
| | |
| | |

Form Approved REPORT DOCUMENTATION PAGE OMB No. 0704-0188 Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing this collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding env other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number. PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS. 2. REPORT TYPE 1. REPORT DATE (DD-MM-YYYY) 3. DATES COVERED (From - To) XX-06-2011 Final Nov 2010 - Mar 2011 4. TITLE AND SUBTITLE 5a. CONTRACT NUMBER **5b. GRANT NUMBER** Arsenic Trichloride Filtration Performance with the Impregnated Carbon ASZMT 5c. PROGRAM ELEMENT NUMBER 6. AUTHOR(S) 5d. PROJECT NUMBER Mahle, John J. None 5e. TASK NUMBER 5f. WORK UNIT NUMBER 7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) 8. PERFORMING ORGANIZATION REPORT NUMBER DIR, ECBC, ATTN: RDCB-DRP-F, APG, MD 21010-5424 ECBC-TR-898 9. SPONSORING / MONITORING AGENCY NAME(S) AND ADDRESS(ES) 10. SPONSOR/MONITOR'S ACRONYM(S) U.S. Army Corp of Engineers, Baltimore District Project Manager COE Environment and Munitions Design Center, ATTN: CENAB-EN-HN, 11. SPONSOR/MONITOR'S REPORT NUMBER(S) 10 South Howard Street, Room 10040-B, Baltimore, MD 21201 12. DISTRIBUTION / AVAILABILITY STATEMENT Approved for public release; distribution is unlimited. 13. SUPPLEMENTARY NOTES 14. ABSTRACT The vapor filtration of AsCl₃ by the adsorbent ASZMT is examined in this report. Microscale testing is performed, with analysis of the concentration by FTIR. The effect of humidity on AsCl₃ stability and filtration performance is considered. Large adsorption capacity is determined, approximately 4 mol/kg, by calculating a mass balance from the measured breakthrough results. Hydrochloric acid breaks through prior to AsCl₃ under humid conditions. 15. SUBJECT TERMS Arsenie trichloride Hydrogen ehloride **ASZMT** Adsorption Chemical Agent Filtration System (CAFS) Filtration 16. SECURITY CLASSIFICATION OF: 17. LIMITATION 18. NUMBER 19a, NAME OF RESPONSIBLE OF ABSTRACT **OF PAGES** PERSON Sandra J. Johnson a. REPORT b. ABSTRACT c. THIS PAGE 19b. TELEPHONE NUMBER (include area U U U UL 23

(410) 436-2914

Blank

PREFACE

This work was started in November 2010 and completed in March 2011.

The use of either trade or manufacturers' names in this report does not constitute an official endorsement of any commercial products. This report may not be cited for purposes of advertisement.

This report has been approved for public release. Registered users should request additional copies from the Defense Technical Information Center; unregistered users should direct such requests to the National Technical Information Service.

Blank

CONTENTS

| 1. | INTRODUCTION | 7 |
|------------|--|----|
| 2. | EXPERIMENTAL METHODS | 9 |
| 3. | RESULTS | 15 |
| 3.1 3.2 | Closed Loop Micro-Breakthrough Tests | 15 |
| 3.3 | Predicted CAFS Filter Performance | 19 |
| 4. | CONCLUSIONS | 20 |
| | LITERATURE CITED | 21 |
| | APPENDIX: CAES FILTER SYSTEM LAYOUT AND SIZING | 23 |

FIGURES

| 1. | AsCl ₃ Hydrolysis Scheme8 |
|-----|--|
| 2. | Vapor Pressure and Antoine Correlation of AsCl ₃ 9 |
| 3. | Volumetric Adsorption Apparatus Schematic |
| 4. | Micro-Breakthrough Apparatus Schematic |
| 5. | FTIR Spectra of AsCl ₃ , HCl and Water |
| 6. | FTIR Calibration Curve for AsCl ₃ |
| 7. | FT1R Calibration Curve for Water |
| 8 | Transient Profile of Water and AsCl ₃ Injections in Closed Loop Volumetric Adsorption Apparatus |
| 9. | Micro-Breakthrough Profile of AsCl ₃ to 2 cm Depth of ASZMT at 9.6 cm/s, Dry, 25 °C |
| 10. | Micro-Breakthrough Profile of AsCl ₃ to 2 cm Depth of ASZMT at 9.6 cm/s, 20% RH, 25 °C |
| 11. | Micro-Breakthrough Profile Logarithmic Scale of AsCl ₃ to 2 cm Depth of ASZMT at 9.6 cm/s, Dry 20% RH, 25 °C. |
| 12. | Breakthrough 4 cm Bed of ASZMT Monitoring for AsCl ₃ , HCl and Water18 |
| 13. | Critical Bed Plot for AsCl ₃ Breakthrough to ASZMT19 |
| | |
| | TABLES |
| 1. | AsCl ₃ Physical Properties |
| 2. | Conditions for Breakthrough Testing9 |
| 3. | Closed Loop Adsorption System Parameters |
| 4. | Micro-Breakthrough System Parameters10 |
| 5. | TEEL Values for AsCl ₃ (ppm)19 |

ARSENIC TRICHLORIDE FILTRATION PERFORMANCE WITH THE IMPREGNATED CARBON ASZMT

1. INTRODUCTION

In an earlier report, an engineering analysis of arsenic trichloride (AsCl₃) filtration at the Spring Valley site was presented, where it was proposed that adequate protection is offered by the Chemical Agent Filtration System (CAFS). A more definitive resolution to this question would be provided by measurement of the vapor filtration of AsCl₃, a commercially available material. This report describes these measurements. The adsorbent used in CAFS is the military adsorbent, ASZMT (Calgon Corp., Pittsburgh, PA), which provides broad spectrum vapor filtration protection. ASZMT is an activated carbon treated with a metal-salt formulation that reacts with acid gases; AsCl₃ is known to hydrolyze forming hydrochloric acid (HCl). It is also reported that AsCl₃ is soluble in water to a ratio of 1:9.² At low dilution, AsCl₃ hydrolyzes to form the non-volatile precipitate As₂O₃. The hydrolysis intermediate arsenous acid (As(OH)₃) has been identified in solution but never isolated. To measure adsorption filtration of AsCl₃, two issues must be resolved. First, a detection technique must be developed; and then, the vapor phase stability of AsCl₃ must be determined. Earlier work had shown that HCl is effectively filtered by ASZMT so by analogy, AsCl₃ filtration is anticipated.

The adsorption filtration performance of toxic industrial chemieals is usually performed by challenging a fixed concentration to a glass tube packed with adsorbent using the same velocity and bed depth conditions as the actual filter. The eluting stream concentration is monitored until an endpoint concentration is recorded, which usually corresponds to a toxic threshold concentration. The results are reported in terms of the challenge dose that is delivered at a given set of conditions.

The possible paths for AsCl₃ and water interaction are listed in the schematic (Figure I). In the top scheme, no water interaction occurs. In the center scheme, AsCl₃ and water coalesce to create fumes where high AsCl₃ and water concentrations can lead to condensation of one or both species. In the bottom scheme, AsCl₃ is shown to go into a liquid water phase where it either exists in a soluble or hydrolyzed form. Starting with dry conditions, FTIR spectra will be compared at different relative humidity (RH) levels. If during testing in the presence of humidity, the vapor phase AsCl₃ spectra change, or quantity of AsCl₃ changes with RH, then aerosols are likely being formed. If acrosol formation is suspected, it could be examined by a particle counter to quantify the aerosol content.

The adsorption of AsCl₃ on activated carbon at dry conditions is expected to be favorable because of its high boiling point 130 °C, see Table 1. In the presence of humidity, significant adsorbed water is also present. For high volatility vapors, this adsorbed water can have complex effects of competitive adsorption and chemical reaction. However, for moderate volatility vapors such as AsCl₃, the adsorber vapor generally displaces water. If hydrolysis of AsCl₃ occurs with adsorbed water, the HCl formed in the adsorbed solution should readily react with the impregnants, for which a large adsorption capacity of ASZMT for HCl has previously been quantified. No HCl would be expected to be generated from the adsorbent.

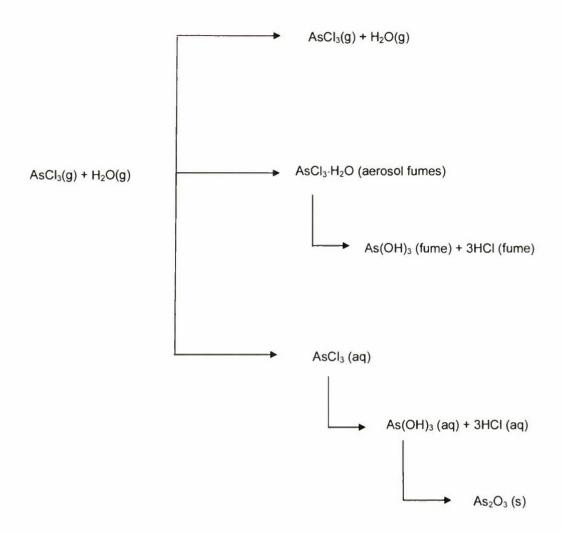


Figure 1. AsCl₃ Hydrolysis Scheme.

Table 1. AsCl₃ Physical Properties.

| Property | Value | |
|-------------------------------------|-------|--|
| Boiling Point (°C) | 130.2 | |
| Vapor Pressure (kPa 20 °C) | 1.17 | |
| Molecular Weight | 181.2 | |
| Liquid Density (g/cm ³) | 2.1 | |

Using a small scale adsorbent test system, the use of the FTIR will be assessed first at dry conditions and then as a function of humidity. Details of this method have been reported. Most likely at some humidity, AsCl₃ and HCl will coalesce with water to form droplets that are retained on the walls of the system and no HCl product is observed in the FTIR. A capacity test will be performed for ASZMT with AsCl₃ at any feasible conditions.

Two types of microtesting were considered. In the first, a closed loop apparatus was used to monitor the vapor composition of AsCl₃ and water mixtures. If the results of Phasc 1 identify some conditions where AsCl₃ is stable as a vapor, then breakthrough testing will be conducted using standard carbon breakthrough methods.⁴ AsCl₃ will be examined first by feeding a bed of glass beads and then a filter tube with ASZMT, see Table 2. The glass beads can be used as control to determine the stability of AsCl₃ in humid air. The AsCl₃ detection would be conducted using either an FTIR, photo-acoustic, or electrochemical cell to simultaneously monitor for HCl.

Table 2. Conditions for Breakthrough Testing.

| Chemical | Conc (ppm) | RH (%) | Bcd Depth (cm) | Temp (°C) | Adsorbent |
|-------------------|------------|-----------|----------------------|--------------|-------------|
| AsCl ₃ | 2000 | 0 | - | 25 | Glass Beads |
| | 2000 | 50 | | 25 | Glass Beads |
| | 2000 | 0 | 2 | 25 | ASZMT |
| | 2000 | 50 | 2 | 25 | ASZMT |

2. EXPERIMENTAL METHODS

Published data by Mathews et al.⁵ of the vapor pressure of AsCl₃ was used to correlate an Antoine fit. The data, correlation fit and parameters are shown in Figure 2.

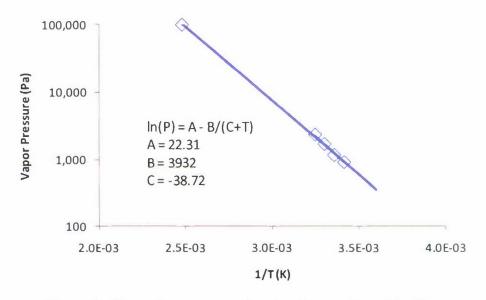


Figure 2. Vapor Pressure and Antoine Correlation of AsCl₃.

The adsorbent used in this study is the military impregnated carbon ASZMT, Calgon Corp., 12x30 mesh, lot number N06A01CD. The adsorbent samples were found to have

3% water loading as received and were used as received because high temperature drying is known to affect the impregnant composition.

The two apparatuses used to assess adsorption were a closed loop volumetric system and a continuous flow micro-breakthrough system. Schematic diagrams of both systems are provided in Figures 3 and 4, respectively. The size and conditions for each system arc shown in Tables 3 and 4. The closed loop circulating apparatus was used to determine the adsorbent capacity for AsCl₃. The system consists of a circulating pump and FTIR. A four-way selector valve is used to challenge or bypass the adsorbent sample. Operation consists of a series of steps. Purging of the system is accomplished with dry, carbon dioxide (CO₂)-free air. The FTIR is calibrated by introducing measured liquid volumes of AsCl₃ into the system with a known volume. The loop is first purged, then the adsorbent samples are loaded. Chemical vapor injections were made to the closed loop for either AsCl₃ or water. A mass balance is used to determine the uptake of vapor on the adsorbent. The micro-breakthrough system is operated by establishing flow rates through the AsCl₃ contactor with the addition of a dilution flow. For the humid micro-breakthrough tests, an additional water sparger flow is included where the adsorbent is first equilibrated at humidity prior to addition of chemical vapor.

Table 3. Closed Loop Adsorption System Parameters.

| Bed Bypass Volume (cm ³) | 269 |
|--------------------------------------|-----|
| Bed Volume (cm ³) | 24 |
| Temperature (°C) | 25 |
| Adsorbent Mass (mg) | 21 |
| Liquid Injection volume (μL) | ~2 |

Table 4. Micro-Breakthrough System Parameters

| Table 4. Where Breaktinough byste | in rarameters. |
|-----------------------------------|----------------|
| Adsorbent Column Dia (cm) | 0.9 |
| Adsorbent Bed Depth (cm) | 2.0 |
| Adsorbent Mass (g) | 0.99 |
| Flow rate (sccm) | 452 |
| Temperature (°C) | 25 |
| Residence Time (s) | 0.17 |

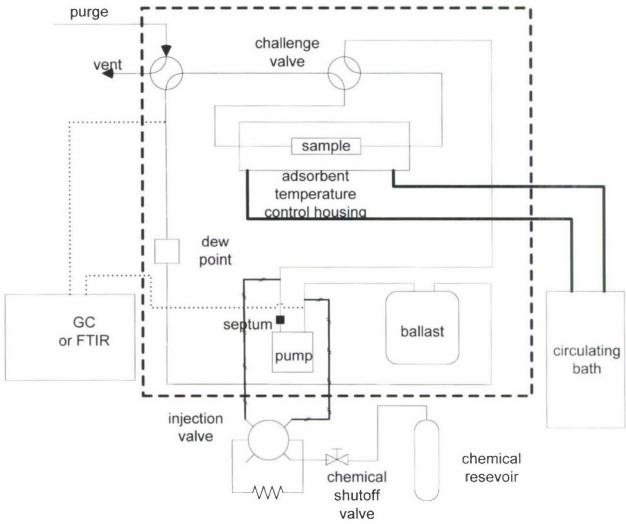


Figure 3. Volumetric Adsorption Apparatus Schematic.

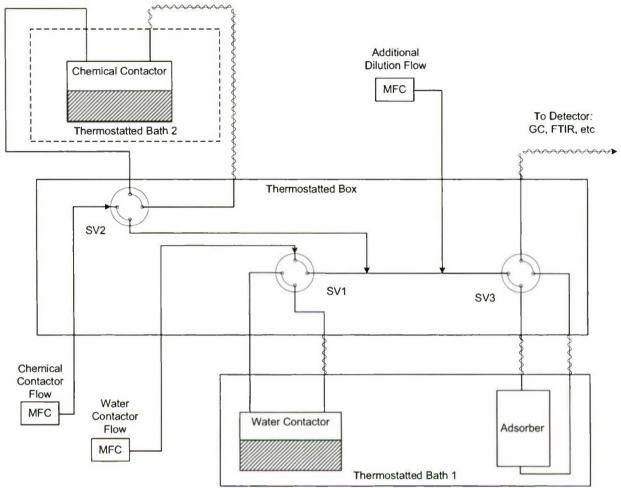


Figure 4. Micro-Breakthrough Apparatus Schematic.

Chemical vapor detection was performed using a Thermo-Nicolet FTIR Model 380 equipped with a Gemini 2 m gas cell. Calibration of water and AsCl₃ was performed by generating a stream of known composition of single component vapors. The gas-liquid contactor illustrated in Figure 5 is used to establish a saturated vapor at the temperature of the bath using published vapor pressure correlation for water and the correlated AsCl₃ results from Figure 2. The FTIR sample spectra, Figure 5, and calibration curves, Figure 6 and 7, are presented. The absorbance of AsCl₃ is not particularly strong; therefore, the lowest calibration point was 250 ppm. The region at 760 cm-1 was chosen for AsCl₃.

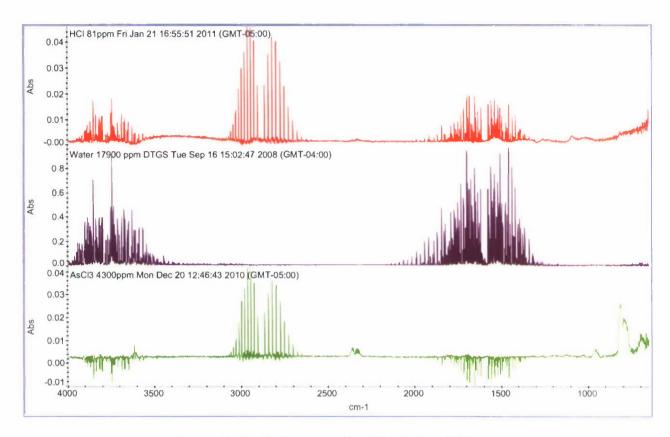


Figure 5. FT1R Spectra of AsCl₃, HCl and Water.

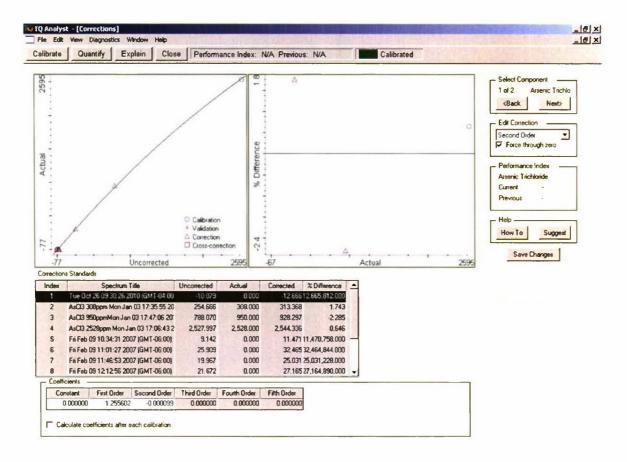


Figure 6. FTIR Calibration Curve for AsCl₃.

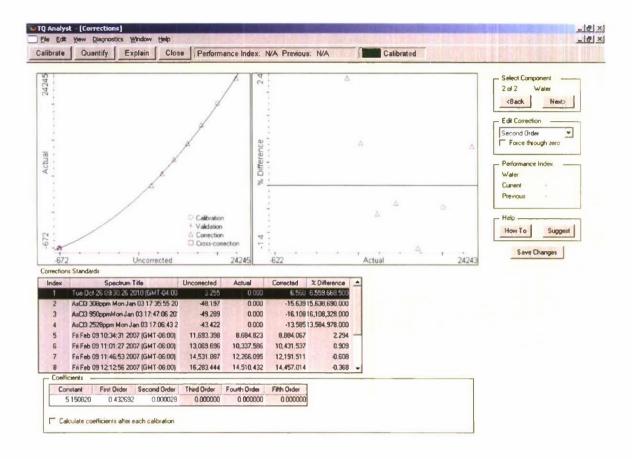


Figure 7. FTIR Calibration Curve for Water.

3. RESULTS

3.1 Close Loop

An experiment was conducted with the closed loop apparatus described in Section 2. The resulting transient profile is presented in Figure 8. Starting at 1490 min, three injections of 2 µL liquid water are delivered in the bypass loop. The vapor concentration rises to approximately 23000 ppm, 75% RH. At 1520, the vapor adsorbent loop is opened and the adsorbent sample becomes equilibrated with humidity. At 1533 min, the system is put back into bypass mode and 2 µL of AsCl₃ is injected. The AsCl₃ concentration is seen to rise, and the water concentration simultaneously falls as a result of water condensation. At 1545, this mixture is exposed to the adsorbent and the vapor concentration of AsCl₃ is seen to drop to the baseline. A second AsCl₃ injection and equilibration station is then conducted. At the end of this step, the concentration does not drop completely to baseline but to an equilibrium vapor concentration of approximately 700 ppm. By a material balance, the adsorbed amount is determined be 4.2 mol/kg.

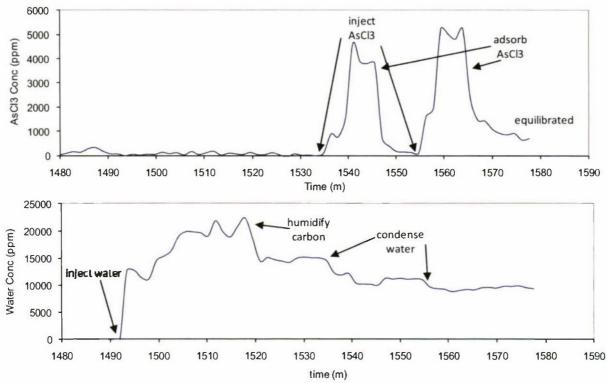


Figure 8. Transient Profile of Water and AsCl₃ Injections in Closed Loop Volumetric Adsorption Apparatus.

3.2 Micro-Breakthrough Tests

Three micro-breakthrough tests were conducted with AsCl₃ using the procedure described in Section 2. Using an adsorption bed packed with 2 cm depth of 0.4 mm diameter glass beads at dry conditions, immediate breakthrough was observed at 1200 ppm for a feed concentration of 2543 ppm. The experiment was stopped after 1 min. This confirmed that there was negligible adsorption in the system.

Next, the 9 mm ID adsorber column was packed with 2 cm depth of 1 mm diameter ASZMT yielding nine particle diameters of adsorbent. Again, dry conditions were used. The transient breakthrough profile was monitored using the FTIR, Figure 9. It is seen that no AsCl₃ is detected in the product until 25 min. The AsCl₃ feed was stopped when the product concentration reached 100 ppm to limit the contact of AsCl₃ with the FTIR cell and the formation of non-volatile arsenous acid. The low concentration end of the breakthrough concentration versus time relationship can be described by an exponential relationship (Wheeler equation) as discussed by Tien. Figure 9 also presents an exponential fit to the data, demonstrating reasonable agreement.

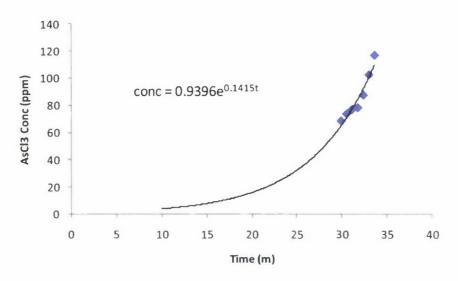


Figure 9. Micro-Breakthrough Profile of AsCl₃ to 2 cm Depth of ASZMT at 9.6 cm/s, Dry, 25 °C. Data are symbols, line is exponential fit.

Micro-breakthrough testing at humid conditions was considered next. An RH of 20% was established, and the adsorbent column equilibrated to those conditions. The AsCl₃ feed concentration of 2528 ppm was then mixed with the humid air. In the Teflon tubing downstream of the mixing point and upstream of the adsorber, condensation was readily apparent. In addition, the vapor phase water concentration recorded downstream of the adsorber dropped from 8000 to 6000 ppm. The breakthrough profile for AsCl₃ is shown in Figure 10. Again breakthrough occurs at approximately 25 min, and an exponential fit is seen to describe the data well. If it is of interest to project backward to find a time when a lower concentration would elute, then the correlations can be presented on a logarithmic plot, Figure 11.

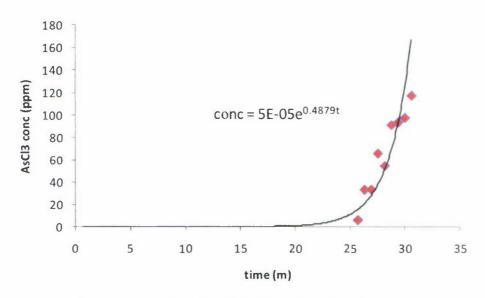


Figure 10. Micro-Breakthrough Profile of AsCl₃ to 2 cm Depth of ASZMT at 9.6 cm/s, 20% RH, 25 °C. Data are symbols, line is exponential fit.

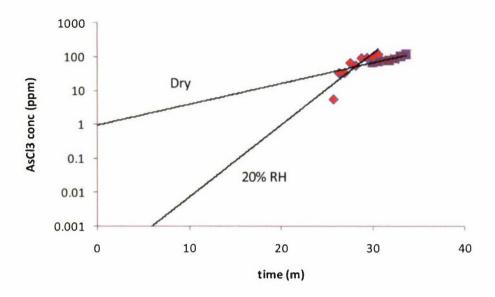


Figure 11. Micro-Breakthrough Profile Logarithmic Scale of AsCl₃ to 2 cm Depth of ASZMT at 9.6 cm/s, Dry 20% RH, 25 °C. Data are symbols, line is exponential fit.

These results indicate that the capacity at dry conditions is greater than at humid conditions, but that the breakthrough curve is sharper for humid conditions. The capacity measured in the volumetric system of 4.2 mol/kg corresponds to approximately 107 min until saturation at the feed condition at 80% RH and 2528 ppm AsCl₃.

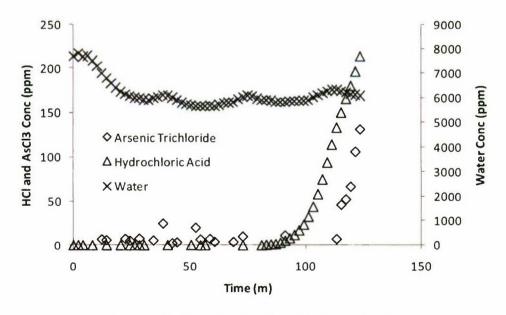


Figure 12. Breakthrough 4 cm Bed Depth of ASZMT Monitoring for AsCl₃, HCl and Water.

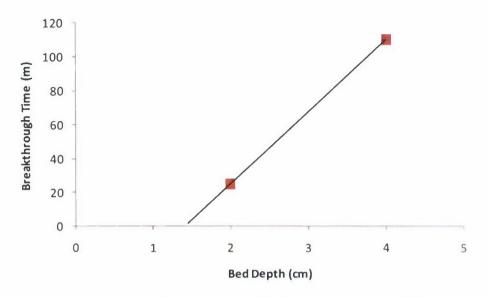


Figure 13. Critical Bed Plot for AsCl₃ Breakthrough to ASZMT.

To further characterize the filtration, another breakthrough run was performed using a deeper bed while monitoring for HCl and AsCl₃. The transient profile (Figure 12) shows that the initial challenge of chemical causes a drop in water vapor concentration of 8000 to 7000 ppm, as seen earlier. The breakthrough of HCl is seen to occur approximately 30 min prior to AsCl₃. Also, the product concentration of AsCl₃ breaks through at 110 versus 25 min for the 4 versus 2 cm bed depth. Figure 13, a critical bed plot, can be used to estimate the depth of the mass transfer zone, 1.5 cm.

3.3 Predicted CAFS Filter Performance

It is of interest to establish the filter performance requirement for AsCl₃. The shelter concentration can be determined from the maximum credible event calculated by assuming 1 L of AsCl₃ released in 1 min into 2500 scfm, which corresponds to 3800 ppm for 1 min (personal communication, Dan Noble, U.S. Army Corp of Engineers (USACE), 2011). From the Parson's Filter Study* and consolidated Response to AU Comments data August 27, 2010,** it appears that Temporary Emergency Exposure Limit (TEEL)-2 levels are appropriate for AsCl₃, which as seen in Table 5 is 1.35 ppm.⁷

Table 5. TEEL Values for AsCl₃ (ppm).

| | TEEL-0 | TEEL-1 | TEEL-2 | TEEL-3 |
|-------------------|--------|--------|--------|--------|
| AsCl ₃ | 0.024 | 0.2 | 1.35 | 12.1 |

^{*}TEEL represents a 15 min average concentration

* Paul Rich P.E., Worker and Public Protection Analysis for AsCl₃ Find. Parson Inc.: Fairfax, VA, unpublished data, May 2010.

^{**} TAPP Comments on the Site Wide Work Plan, Site-Specific Work Plan for High Probability Investigations at 4825 Glenbrook Rd, and the Three Supporting Memoranda (May 2010) and Associated Responses; unpublished data, May 2010.

The correlation result for the concentration profile can be used to calculate the dose, concentration multiplied by time (Ct) of the tested filter tube. Using the exponential correlation fit for the 20%RH case the breakthrough time for 1.35 ppm is 20.9 min. The filter Ct is then the feed concentration multiplied by breakthrough time at TEEL-2 or 53000 ppm*m. From this value, the breakthrough time for the CAFS filter can be estimated using the ratio of residence time between the CAFS, see the Appendix, and the tube, which is 2.9, and the concentration of the 1 min AsCl₃ event versus the tube test. From these results, the CAFS filter is thus estimated to retain approximately 41 AsCl₃ releases; whereas at dry conditions, the CAFS would only retain 5 AsCl₃ releases.

4. CONCLUSIONS

An experimental investigation is reported for the adsorption of AsCl₃ vapor on the activated carbon ASZMT. At humid conditions, condensation was observed. Both volumetric closed loop data and micro-breakthrough testing demonstrate significant capacity at dry and humid conditions. Application of these results to the case of the Chemical Agent Filtration System filter indicates that conditions identified for the maximum at the U.S. Army Corp of Engineer's Spring Valley credible event are well within the design space.

LITERATURE CITED

- I. U.S. Army Edgewood Chemical Biological Center, Research and Technology Directorate, RDCB-DRP-F 3 June 2010, subject: *Spring Valley Site Cleanup*.
- 2. The Chemistry of Arsenic Antimony and Bismuth; N.C. Norman ed.; Blackie Academic & Professional: London, 1998.
- 3. Peterson, G.; Wagner, G.; Balboa, A.; Mahle, J.; Sewell, T.; Karwacki, C. Ammonia Vapor Removal by Cu₃(BTC)₂ and its Characterization by MAS NMR. *J. Phys Chem. C* **2009**, 13906-13917.
- 4. Standard Gnide for Gas-Phase Adsorption Testing of Activated Carbon; ASTM- D 5160 -95; ASTM International: West Conshohocken, PA, September 2008; UNCLASSIFIED Standard.
- 5. Mathews, J.; Sumner, F.; Moelwyn-Hughes, E. The Vapour Pressure of Certain Liquids. *Trans. Faraday Soc.* **1950**, *46*, 797.
- 6. Tien, C. Adsorption Calculations and Modeling; Butterworth-Heinemann: Boston, MA, 1994, p 194.
- 7. Protective Action Criteria (PAC) Data Set of Emergency Management Issues Special Interest Group (EMI SIG) Department of Energy, Revision 26 (September, 2010). http://orise.orau.gov/emi/scapa/default.htm (accessed March 22, 2011).

Blank

APPENDIX: CAFS FILTER SYSTEM LAYOUT AND SIZING

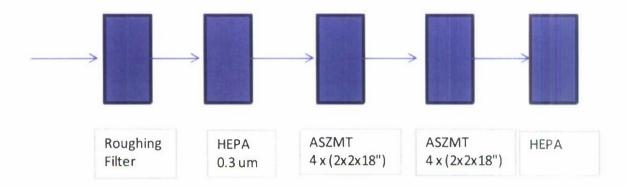


Figure. Schematic of CAFS.

Table. Operating Parameters of CAFS Carbon Filters.

| CAFS nominal flow rate | 2500 cfm |
|---------------------------------------|-------------------|
| CAFS actual flow rate | 2080 cfm |
| Number of carbon banks | 2 |
| Carbon cells per bank | 4 |
| Number of V beds per cell | 3 |
| Number of sections per V bed | 2 |
| Residence time per bank | 0.25 s |
| Nominal size of V carbon cell element | 2ft x 2ft x 18in. |
| Effective size of a V half face | 18 in. x 18 in. |
| Velocity per bank | 19.5 cm/s |

^{*}A carbon bank is called a HEGA (High Efficiency Gas Adsorber)